


Development monitor MULTI

Assists in the analysis of mixing data using horizontal mixers.
 Records mixing graph data and dough temperature automatically.
 Stabilizes the product.

● Monitor display sample for Development Monitor MULTI (multi-windows are shown for explanation)

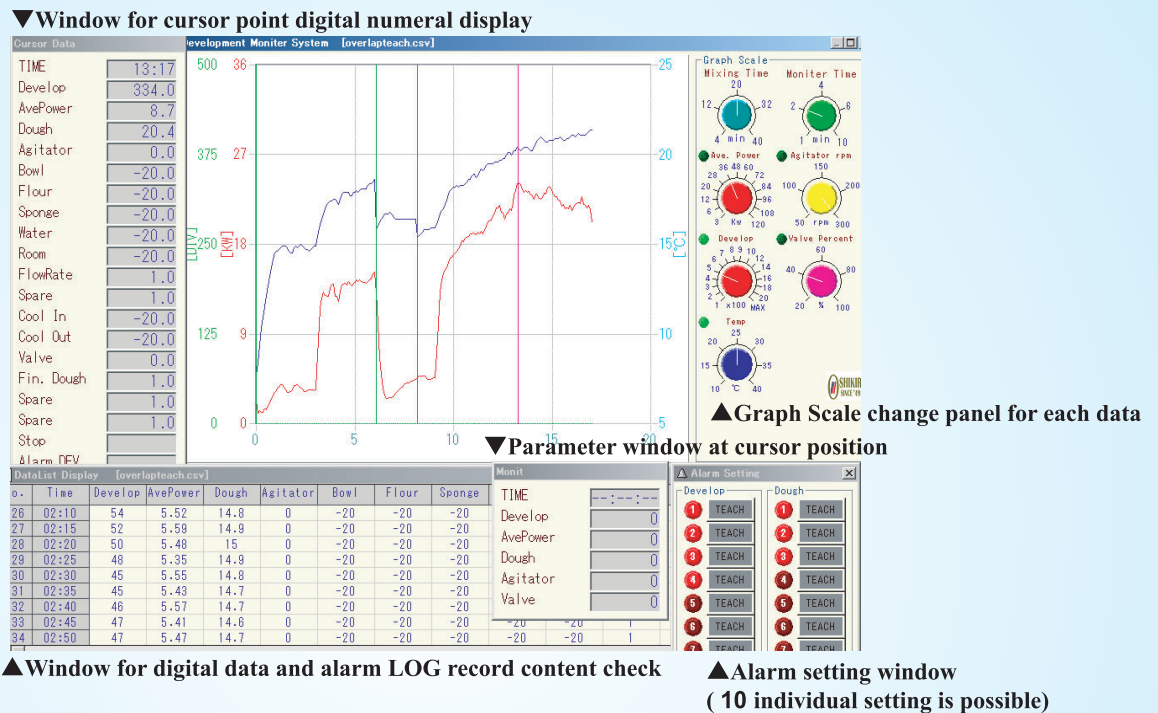

- ◆ Variety switches and data management.
- ◆ Panel scale range adjustment
- ◆ Logging of stops during procedure
- ◆ Display shows develop value, mixer power value, and dough temperature
- ◆ Overlap display of saved data & in-process data
- ◆ Data saving in CSV.

Automatic data save function

In-process data can be recorded and saved automatically.

Data comparisons


In-process graph data can be displayed on saved data overlapped.
 This allows operation of mixing procedure with viewing saved data.

Deviation detection alert

Alert ranges can be set based on saved data.
 When a difference observed from in-process data, alert displays and alert sounds to notify the operator.

Development monitor MULTI

▼ Installation sample of Development Monitor MULTI

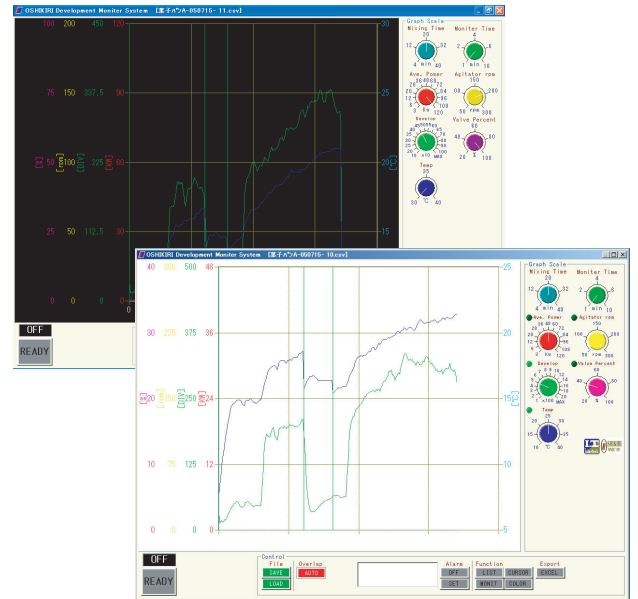

▲ Revise of monitor color can be set freely

◆ Specifications

Dustproof cover as standard spec

unit weight 80kg

unit size W 600 × D 500 × H 1500 mm

Standard to be displayed

- Dough Temperature
- Develop Graph
- Mixer motor power graph

(★ Other sensor output as optional can be possible)

PC to be used Note PC (required serial port)

(Please contact us for detailed specifications.)

OS to be used WINDOWS 10 (Please contact us for detailed specifications.)

*WINDOWS IS A REGISTERED TRADEMARK OF MICROSOFT

The Develop Monitor Multi allows you to;

- ◇ Adjustment of ingredients mixing required due to climate fluctuations
- ◇ Mixing study of new formulation
- ◇ Alert for operation errors such as feeding failure of any ingredients.

※ This product can be shipped with the mixer already installed.

Please contact us if you would like to have it installed in other ways.

OSHIKIRI MACHINERY LTD.

<https://www.oshikiri.com/>

4, Kirihara-cho, Fujisawa-shi, Kanagawa, 252-0811 Japan
 Phone: 0466-44-6184 Fax: 0466-44-6187 E-mail: intl@oshikiri.com

Oshikiri Corporation of America

10425 Drummond Road, Philadelphia, Pennsylvania 19154-3898

Phone: 215-637-6005 Fax: 215-637-6041 E-mail: oshikiri-production@msn.com



OSHIKIRI Website